

SÔLT

User's Guide

PAGER – SP5



Capture Technologies Limited UK
<https://soltpaging.co.uk>

- Thank you for purchasing Solt wireless calling system products.
- Please read this user's guide carefully before using and follow the instructions.
- Specification and instructions are subject to change without notice.

Contents

Important Safety Instructions	3
Contents / Specification	4
Name of each Part	5
List of setting modes for pager / Features	6
All registered bell IDs deleting	7
F1 Called number deleting mode	8
F2 Sound / Vibration mode	9
F3 How to manipulate the time display	10
Time setting	11
E1 New call bell registration _ sequential registration	12
Sequential registration[Example]	13
New call bell registration _ individual registration	14
Individual registration[Example]	15
E2 Bell ID changing mode	16~17
How to change the bell ID [Example]	18~19
E3 [No receive] bell ID setting mode	20~21
E4 Duplicate-Call interval setting mode	22
E5 Reminder Alert ON/OFF setting mode	23
Recharging Instructions	24
Instructions on how to wear/assemble each model	24


Important Safety Instructions

In order to prevent harm or injury to those using the equipment or to any other persons and/or property, please be sure to read the following safety instructions.


Warning This sign warns of possible death or serious injury to persons and/or property.

Caution This sign warns of possible damage or injury to persons and/or property.


Power precautions

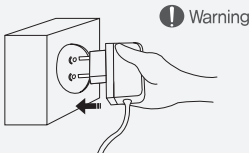


Make sure the power plug is correctly inserted in to the wall outlet. [If the plug is inserted improperly, it may cause electric shock or generate heat resulting in fire.]

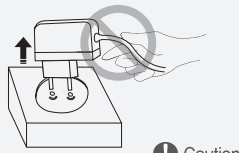


Never do anything that might cause damage to the cord or power plug. [This may generate heat resulting in fire.]

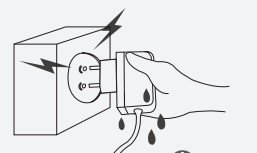


Do not connect or disconnect the power plug with wet hands. [This may result in electric shock.]

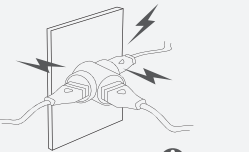

Do not use multiple power plugs on one connector. [This may generate heat resulting in fire.]

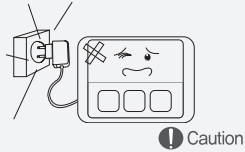


Unplug the power plug if the main unit is damaged. [It may cause electric shock or generate heat resulting in fire. Please contact service center.]

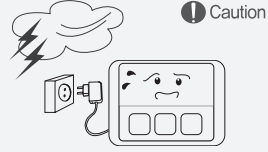


Unplug the power plug, in case of lightning or when unused for long periods of time. [It may cause electric shock or generate heat resulting in fire.]


Use precautions

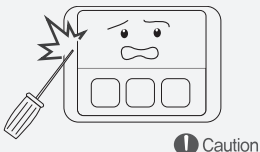


Do not harm or damage the unit with sharp object such as nail, pencil, or pen. [It will damage the surface of the unit and cause malfunction.]

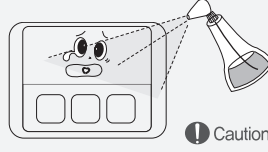

Do not clean the unit with water, benzene, or paint thinner. [Damage to the insulation of electrical parts may cause malfunction.]

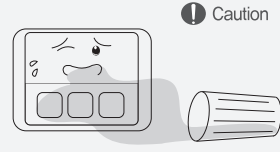

If foreign object enters the unit, please contact service center. [This may cause damage to the internal parts.]

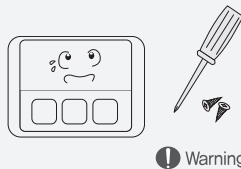

Do not disassemble or modify the unit. If repair of the unit is required, please contact the service center.



If the battery icon in the illustration above flashes, recharge for more than two hours before use.



Use the supplied adapter. [Malfunctioning of supplied adapter during its use is not covered by manufactures' warranty.]

Contents

Pager (Wrist Type / Clip Type)



▲ SP5-200 (Clip Type)

◀ SP5-100 (Wrist Type)

Charging adapter



※ Limited accessory warranty:
Malfunctioning of supplied adapter during its use is not covered by manufactures' warranty.


※ **Use only the supplied adapter to charge the unit.**
(AC100-240V, 50/60Hz)
Unlike other devices, a PC could not be used for charging due to USB port incompatibility.

Specification

Model	SP5-100 / SP5-200
Frequency(MHz)	433.0500 ~ 434.7900
Freq Stability	± 5 ppm
Data Rate	1800 bps
Channel space	12.5 KHz
Modulation	FSK (±3KHz)
Sensitivity	-118dBm (at 12dB)
Power Supply	DC 3.7V Li-Polymer Battery (Rechargeable)
Dimension(mm)	56W × 42L × 16H
Battery Standby Time	Max 30 hours
Antenna	Helical (Internal)

Name of each part

※ Wearing methods are different model by model.

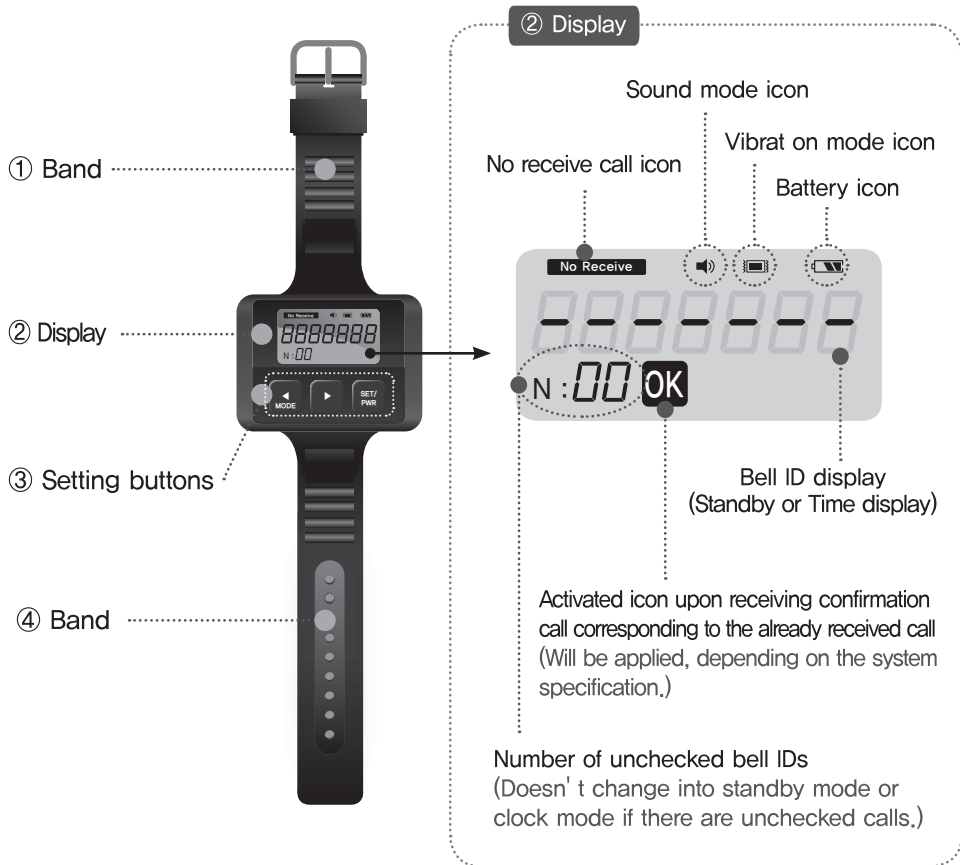

③ Setting buttons

◀ / MODE	• Menu button for setting mode • Left button
▶	• Right button
SET / PWR	• Storing set value • Power button (Press this button more than 3 sec for power on and off)

List of setting modes for pager

Each setting mode below is activated with the setting buttons.

F1	Called number deleting	Received call number deleting function.
F2	Sound / Vibration	chirp, strong/weak vibration, beep, beep after vibration
F3	How to manipulate the time display	Time display mode / Time setting
E1	New call bell registration	Adds new bell ID to the list
E2	Bell ID changing	Assigns different bell ID for bells.
E3	No receive bell ID setting	Sets bell IDs not to be called.
E4	Duplicate-call interval setting	Keeps from duplicate calls during the set time period.
E5	Reminder Alert setting	Reminds unconfirmed call number among last 10 calls.

Features

- ▶ Last 10 received call number checking feature :
Identifies and confirms the last 10 received numbers in sequential order.
Automatically deletes the first received call number when the 11th call is received.
- ▶ Selection of sound or vibration against receiving calls.
- ▶ Lamp lights automatically when a call is received.
- ▶ Each deletion of received calls.
- ▶ Time display mode.
- ▶ Setting Alert mode for unchecked call numbers.

[N:00 Example screen]

	Last received bell ID (100) is displayed on the screen [N:03] – Three saved calls are not checked.
---	---

- ▶ Doesn't change into standby mode or clock mode if there are unchecked calls.

All registered bell-IDs deleting

- A method of deleting all registered bell IDs.

! Warning

If you execute this function, all registered bell IDs are erased.
You are recommended to use this function carefully.

- (1) Press and hold (▶) button for 10 seconds.



- [dELETE] is displayed.



- (2) Press (SET) button.

A beep will sound and all registered bell IDs are erased.



- After deleting, [-----] is displayed.



[Standby screen]

※ Undelete

- In the case of pressing the button by mistake.
- In the case of change of mind.

How to : When the [dELETE] is indicated on the screen, press (◀) button to go back to the standby screen.



[Standby screen]



Called number deleting mode

· Received call number deleting function.

(1) Press and hold (MODE) button for 3 seconds.



· Entering setting mode as [F1 dELE] is displayed.

(2) Press (SET) button.



· Received called number is displayed.

(3) Press (◀▶) buttons to select desired called number.



· Selected called number is displayed.

(4) Press (SET) button.



· Selected called number is deleted and next called number is displayed.

· To delete another called number, repeat steps (3) to (4)

(5) Press (SET) button for 3 seconds.



· [F1 dELE] is displayed and returns to previous step.

※ Press (◀▶) buttons to select different setting mode.

(6) Press and hold (MODE) button for 3 seconds.



· [-----] is displayed and ready for reception.



Sound / Vibration mode

· Sound or vibration selection function for alarm of call.

(1) Press and hold (MODE) button for 3 seconds.



· Entering setting mode as [F1 dELE] is displayed.

(2) Press (▶) button.



· [F2 Sond] is displayed.

(3) Press (SET) button. Press (◀▶) button to select the desired setting.



[Chirp]



[Weak Vibrations]



[Strong Vibrations]



[Beep]



[Beep After Vibrations]

(4) Press and hold (SET) button for 3 seconds.



· [F2 Sond] is displayed and returns to previous step.

※ Press (◀▶) buttons to select different setting mode.

(5) Press and hold (MODE) button for 3 seconds.



· [-----] is displayed and ready for reception.



How to manipulate the time display

 : Out of time display mode

 : On time display mode

(1) Press and hold (MODE) button for 3 seconds.



 
· Entering setting mode as [F1 dELE] is displayed.

(2) Press (▶) button twice.



· [F3 TImE] is displayed.

(3) Press (SET) button. Press (◀▶) button to select the desired setting.



 : Time display OFF

 : Time display ON

(4) Press and hold (SET) button for 3 seconds.



· [F3 TImE] is displayed and returns to previous step.

※ Press(◀▶) buttons to select different setting mode.

(5) Press and hold (MODE) button for 3 seconds.



· [-----] is displayed and ready for reception.

Time setting

 : Detailed time setting instruction.


(1) Press and hold (MODE) button for 3 seconds.

(2) Press (▶) button twice.


(3-1) Press (SET), select  then press (SET) again.



(3-2) Press (◀▶) buttons to set desired hour. Press (SET) button.

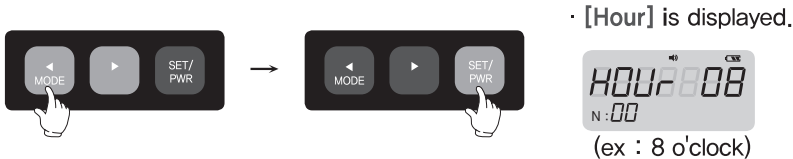

(3-3) Press (◀▶) buttons to set desired minute.

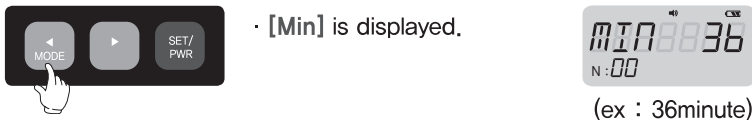

(4) In order to exit the previous step [F3 TImE], press and hold (SET) button for 3 seconds.

(5) In order to exit from [F3 TImE] to the standby mode, press and hold (MODE) button for 3 seconds.

·  is displayed and ready for reception.



New call bell registration

 
- Adds new bell ID to the list

(1) Press and hold (MODE + SET) button for 3 seconds.



- Entering setting mode as [E1 brEg] is displayed.

(2) Press (SET) button.



- Blinking [1] is displayed.

(3) Press the bell button to register. The pressed bell ID is registered as 1.



- Sequential registration : 1, 2, 3, 4, 5 / A, B, C, D, E in order.
Each time a call bell is pressed, sequentially displayed number is registered as an ID of pressed bell.

Number mode	0123456789
English mode	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z - _ 8 (Blank)

(4) Press and hold (SET) button for 3 seconds when registration is finished.



- [E1 brEg] is displayed and returns to previous step.

(5) Press and hold (MODE) button for 3 seconds.



- [-----] is displayed and ready for reception.

Sequential Registration [Example]

Instruction on how to register new bell ID 1-5

- (1) Press and hold (MODE + SET) button for 3 seconds.



· Entering setting mode as [E1 brEg] is displayed.

- (2) Press (SET) button.



· Blinking [1] is displayed.

- (3) If (bell ID 1) button is pressed, a beeping sound indicates that registration is completed.



bell ID 1



· Blinking [2] is displayed.

- (4) Like instruction (3) above, if other call bell buttons are pressed in order, they are sequentially registered.



bell ID 2



bell ID 3



bell ID 4



bell ID 5

- (5) In order to exit the previous step [E1 brEg], press and hold (SET) button for 3 seconds.

- (6) In order to exit from [E1 brEg] to the standby mode, press and hold (MODE) button for 3 seconds.

· [————] is displayed and ready for reception,

Individual registration of new call bell

 
· Registers a new call bell one by one

(1) Press and hold (MODE + SET) button for 3 seconds.



· Entering setting mode as [E1 brEg] is displayed.

(2) Press (SET) button.



· Blinking [1] is displayed.

(3) (◀ ▶) or (SET), (MODE) buttons are used for setting.

[▶] button : sets numeric and alphabetical letters in increasing order.
 [◀] button : sets numeric and alphabetical letters in decreasing order.
 [SET] button : shifts the digit locations.
 [MODE] for 3 seconds : To change from numbers to English or vice versa, press [MODE] for 3 seconds

(4) Press the call bell to be registered, then a beep sounds.
 (A beeping sound indicates that registration of a call bell ID is completed.)



※ To register another bell, repeat the processes from (3) to (4).

(5) Press and hold (SET) button for 3 seconds when registration is finished.



· [E1 brEg] is displayed and returns to previous step.

(6) Press and hold (MODE) button for 3 seconds.



· [-----] is displayed and ready for reception.

Individual Registration [Example]

Instructions on how to register a new call bell [C03]

(1) Press and hold (MODE + SET) button for 3 seconds.

 
(2) Press (SET) button.




(3) Among [C03], in order to set '3' press (►) twice



(4) Among [C03], in order to set '0' (To set '0' before '3') press [SET] then press(►) once.



 (5) Among [C03], in order to set 'C' (To set 'C' before '03') press [SET], then press and hold [MODE] for 3 seconds to change to English then press (►) twice.



(6) Press the call bell to be registered, then a beep sounds.
(A beeping sound indicates that registration of a call bell ID is completed.)
· The pressed call bell ID is registered as [C03].

(7) In order to exit the previous step [E1 brEg], press and hold (SET) button for 3 seconds.

 
(8) In order to exit from [E1 brEg] to the standby mode, press and hold (MODE) button for 3 seconds.
· [-----] is displayed and ready for reception,



Bell ID changing mode

- Assigns different bell ID for bells.

(1) Press and hold (MODE + SET) button for 3 seconds.



- Entering setting mode as [E1 brEg] is displayed.

(2) Press (▶) button once.



 
- [E2 dISP] is displayed

(3) Press (SET) button.



- The first registered bell ID is seen on the screen.

(4) Select the bell ID that you want to change using (◀▶) buttons.
Press (SET) button.




- Selected bell ID is displayed and blinking.

(5) Set your desired bell ID using (◀▶) buttons.


[▶] button : sets numeric and alphabetical letters in increasing order.
 [◀] button : sets numeric and alphabetical letters in decreasing order.
 [SET] button : shifts the digit locations.
 [MODE] for 3 seconds : To change from numbers to English or vice versa, press [MODE] for 3 seconds

 (6) Press and hold (SET) button for 3 seconds then the bell ID is changed as you desire.



- Another registered bell ID is displayed.
- To change it to different bell ID, repeat the processes from (4) to (6).

 (7) Press and hold (SET) button for 3 seconds when the change registration is finished.



- [E2 dISP] is displayed and returns to previous step.

(8) In order to exit from [E2 dISP] to the standby mode, press and hold (MODE) button for 3 seconds.



 
- [-----] is displayed and ready for reception.

How to change the bell ID [Example]



Instructions on changing [100] to [A1-03]

- (1) Press and hold (MODE + SET) button for 3 seconds.
- (2) Press (▶) button once. Press (SET) button.



· The first registered bell ID is displayed on the screen.

- (3) Using (◀▶), choose 100 then press [SET].



· The last '0' in [100] is seen blinking on the screen.

- (4) To set '1' to make [A1-03], press (▶) once.



· The last '1' in [101] is seen blinking on the screen.

- (5) To set 'A' to make [A1-03], press [SET] then press and hold [MODE] for 3 seconds to change from number to English mode.



· When the first letter of the Alphabet 'A' is set, the 'A' in [1A1] blinks.

To switch from numeric to English mode, press and hold [MODE] for 3 seconds.

- (6) To set "Blank" to make [A1-03], press (SET) then press (◀) twice.



· ' _ ' is seen and blinking when [_A1] is displayed.

- (7) To set "3" to make [A1-03], press (SET) then press (▶) 4 times.



· '3' is seen and blinking in [A1 3] on the screen.

- (8) To set "0" to make [A1-03], press (SET) then press (▶) once.



· '0' is seen and blinking in [A1 03] on the screen.

- (9) To set "-" to make [A1-03], press (SET), press and hold [MODE] for 3 seconds to change to English mode then press (◀) 3 times.
< "-" is a part of English mode.>



· ' - ' is seen in [A1-03] blinking on the screen.

Number mode	0123456789
English mode	A b C d E F G H I J K L M N O P Q r S T U V W x Y Z - _ 8 (blank)

- (10) In order to exit the previous step [E2 disp], press and hold (SET) button for 3 seconds. Press and hold (MODE) button for 3 seconds.

- (11) In order to exit from [E2 disp] to the standby mode, press and hold (MODE) button for 3 seconds.

· [-----] is displayed and ready for reception.



No Receive bell ID setting mode

- Sets bell IDs not to be called.

(1) Press and hold (MODE + SET) button for 3 seconds.



- Entering setting mode as [E1 breg] is displayed.

(2) Press (▶) button twice.



- [E3 dAOF] is displayed.

(3) Press (SET) button.



 
- Already registered bell IDs are displayed.

(4) To navigate the registered bell IDs, press (◀, ▶) buttons and select the bell ID not to be called.



- Selected bell ID is displayed.

(5) Press (SET) button to select desired receiving mode.



· [No Receive] icon toggles each time (SET) button is pressed.

※ To set another bell ID, repeat the processes from (4) to (5).

 


e.g.) bell ID 200 is set not to be called then [No Receive] icon is displayed and pager close not receive a call from bell 200.



e.g.) bell ID 200 is set to be called then [No Receive] icon is not displayed.

(6) In order to exit the previous step [E3 dAOF], press and hold (SET) button for 3 seconds.



· [E3 dAOF] is displayed and returns to previous step.

(7) In order to exit from [E3 dAOF] to the standby mode, press and hold (MODE) button for 3 seconds.



· [-----] is displayed and ready for reception.



Duplicate-call interval setting mode

- Keeps from duplicate calls during the set time period.

(1) Press and hold (MODE + SET) button for 3 seconds.



- Entering setting mode as [E1 brEg] is displayed.

(2) Press (▶) button 3 times.



- [E4 dUPT] is displayed.

(3) Press (SET) button.



- [3] is displayed.
- ※ 3 is set for default. (Unit : second)

(4) Press (◀ ▶) buttons and set a period of time desired.

In order to exit the previous step [E4 dUPT], press and hold (SET) button for 3 seconds.



- [E4 dUPT] is displayed and returns to previous step.

(5) In order to exit from [E4 dUPT] to the standby mode, press and hold (MODE) button for 3 seconds.



- [-----] is displayed and ready for reception.



Reminder Alert ON/OFF setting mode

- Reminds the unconfirmed call number among last 10 call numbers.

(1) Press and hold (MODE + SET) button for 3 seconds.



 
- Entering setting mode as [E1 breg] is displayed.

(2) Press (▶) button 4 times.



- [E5 rEmd] is displayed.

(3) Press (SET) button. Press (◀ ▶) buttons to select [ON or OFF].



Reminds the user with alarm in every 1 minute when there are unchecked calls.



No alarm for unchecked call numbers.

(4) In order to exit the previous step [E5 rEmd], press and hold (SET) button for 3 seconds.



- [E5 rEmd] is displayed and returns to previous step.

(5) In order to exit from [E5 rEmd] to the standby mode, press and hold (MODE) button for 3 seconds.



- [-----] is displayed and ready for reception.



Recharging Instructions

Full charged battery can be used for up to 30 hours.

Usage time varies depending on setting of call alarm method.



[Lift USB cover and connect USB cable as above.]

Use only the supplied cable to charge.

Using different products could cause damage to the pager.

Battery charging level :  /  /  / 

-  : This battery icon indicates that the unit is in need of charging.
Use after charging for 2 hours.
- The battery icon blinking indicates that charging is taking place.

Instructions on how to wear/assemble each model

[Wrist model]

- Push in ends to designated slot completely.
- Push the marked part to face outside.



[Clip model] – Push the marked part to face outside.



CAPTURE TECHNOLOGIES LIMITED
1880 LEEK ROAD, STOKE ON TRENT
STAFFORDSHIRE, ST2 7AH

TEL: 0843 506 6000
<https://soltpaging.co.uk>